MDC-i4260C User's Manual

Part 1

(Product Overview)

MicroDigital Inc.

www.microdigital.co.kr

Contents

1. Product Overview 3
1.1. MicroDigital® 3
1.2. MDC-i4260C 3
1.3. Key Functions of MDC-i4260C 4
1.4. Technical Specification of MDC-i4260C 5
1.5. Packing List 7
2. Hardware Description 8
2.1. MDC-i4260C Front Panel View 8
2.2. MDC-i4260C Rear Panel View 9
2.2.1. CTL Port Description 10
3. MDC-i4260C HW installation and basic setup 11
3.1. Before installation 11
3.2. Factory Default Condition 11
3.3. MDC-i4260C Hardware Installation 11

1. Product Overview

1.1. MicroDigital®

MicroDigital® is a device which digitizes analog Video from CCD Camera as digital stream and transmits over Internet.

Users can monitor Video at any places in real time by MS Internet Explorer or Netscape Communicator without any additional software, if Internet access is possible.

1.2. MDC-i4260C

MicroDigital® MDC-i4260C is a stand-alone device transmitting Video from built-in Analog Camera over IP(Internet Protocol) Network.

It can transmit up to 30fps over the existing network such as LAN, leased line, DSL and Cable modem. You can monitor Video of MDC-i4260C through either web browser(MS IE or Netscape Communicator), if MDC-i4260C is connected to Network. MDC-i4260C supports Video compression both Motion-JPEG and H.264 simultaneously so that user can choose appropriate Video compression for the purpose.

MDC-i4260C supports NTSC/PAL and 5 different size and 6 levels of Video quality.

Picture 1 : MDC-i4260C

1.3. Key Functions of MDC-i4260C

- Standalone device built-in web server
- 10M/100M Auto Sensing Ethernet
- Configure and control device through Web browser
- Max 30 fps transmission speed on TCP/IP network
- Effective Bandwidth & Bit-rate Control (VBR/CBR) by H.264
- Supports Dual Stream (Motion JPEG & H.264)
- 1ch Voice Encoding / 1ch Voice Decoding
- Support Dynamic IP users by IPCCTVDNS server
- Support Various PTZ (Pan/Tilt/Zoom) Devices
- Support Sensor Input, Digital Output
- Support Transparent mode
- Built-in 2 way Audio transmission (1ch A-in, 1 A-out)
- Encryption function by user authentication
- Support Modem (Dial-in, Dial-out)
- Image transmission function via FTP, Email

1.4. Technical Specification of MDC-i4260C

Model Name	MDC-i4260C
Hardware	32bit Embedded CPU Flash 8Mbytes /SDRAM: 128Mbytes Linux version 2. 6.xx operating system Battery backed up real-time clock
Image sensor	1.3M Micron Progressive CMOS
Lens	Megapixel mount
Minimum illumination	2.0 Lux
Video compression	Motion JPEG H.264
Max Video Resolution	1280(H) X1024(V)
Max Streaming Speed	1280 X 1024 / 15 Frame per second 640 X 480 / 30 Frame per second
Video Streaming	Motion JPEG and H.264 Dual Streaming (Simultaneously) Controllable frame rate and bandwidth
Image setting	Compression levels: 6 (Motion JPEG) / 6 (H.264) Color: color, black & white
Voice	APCM 4bit IMA Sampling rates 8KHz Audio 1ch in & 1ch out
LAN interface	10/100BaseT Ethernet auto sensing IEEE 802.11g Built-in wireless(Option)
Alarm I/O Interface	1 Photo-coupled inputs and 1 Relay output
Audio Support	2way
Audio Comression	8Bit PCM, 8Khz, 8Kbyte / Sec
Audio In / Out	1 In / 1 Out
Power Over Ethernet	Option
Serial Interface	One serial port for console, modem(PSTN & GSM), serial input/output device, PTZ CTL Port is RS-232, RS-485 Max Baudrate: 115200 bit/s
Security features	Multi user level protection for camera access, PTZ, Alarm I/O
Advanced Service	Up to 15.5M memory for Pre/Post alarm buffer e-mail, FTP, alarm Buffer by event or schedule IP notification, Alarm Notification to e-mail, CGI Call by event or schedule
Built-in Motion detections	Accuracy: 12x12=144 blocks Motion Sensitivity : -100 ~ 100 : 100 is hypersensitive
Others	Transmit Serial input data transfer with Video IP notification by e-mail
Management	Configurable by serial, web or telnet Remote system update via telnet, FTP OR web browser.

PWR Supply	SMPS input: 100~240VAC, 300mA Output: DC 12 Volt, 800mA
PWR Consumption	DC 12Volt 500 mA
Operating Environment	Temperature : 41° ~ 122°F (5° ~ 50°C) Humidity : 20 ~ 80% RH(non-condensing)
Users	16 simultaneous users
Installation, management and maintenance	Installation CD and web-based configuration Firmware upgrades over HTTP or FTP , firmware available at www.microdigital.co.kr
Video access from Web browser	Video access from Web browser
Minimum Web browsing requirements	Pentium III CPU 500 MHz or higher Windows XP, 2000, NT4.0*, Internet Explorer 6.x or later
System integration support	Powerful API for software integration available at http://www.microdigital.co.kr, including Simple Viewer API, MicroDigital Control SDK, event trigger data in video stream, embedded scripting and access to serial port peripherals over HTTP/TCP User can be installed user program daemon for event notification or sending image. Embedded operating system: Linux 2.6
Supported protocols	HTTP, TCP/IP, FTP, Telnet, RARP, PPP, PAP, CHAP, DHCP, SMTP client(e- mail), NTP, RTP/RTSP
Applications	MicroDigital CMS, MicroDigital Software NVR(MDR-IS004)

Table 1 : MDC-i4260C Specification

1.5. Packing List

MDC-i4260C's packing box includes the following items

MDC-i4260C	1ea	
Power Supply Unit (Power Cable & SMPS DC12V 0.8A Adapter)	1ea	
Direct Cable	1ea	
CD (User's Manual, installation wizard and Pictures)	1ea	
MD-PWE Adapter (To supply to power through the LAN Cable.)	Option	
MD-POE Adapter (To supply to power through the LAN Cable From POE Router.)	Option	

Table 2 : MDC-i4260C Packing List

☞ *Please check all the listed items are included in your package. For any missing items, please contact your local distributor.*

2. Hardware Description

2.1. MDC-i4260C Front Panel View

Picture 2 : MDC-i4260C Front Panel

	Name	Description
A	LENS MOUNT RING	Adjustable hand-screw ring for LENS mount
B	LENS	C-MOUNT LENS, Only with Lens option separately sold. (IRIS LENS can be mounted)

Table 3 : MDC-i4260C Front Panel Description

2.2. MDC-i4260C Rear Panel View

Picture 3 : MDC-i4260C Rear Panel View

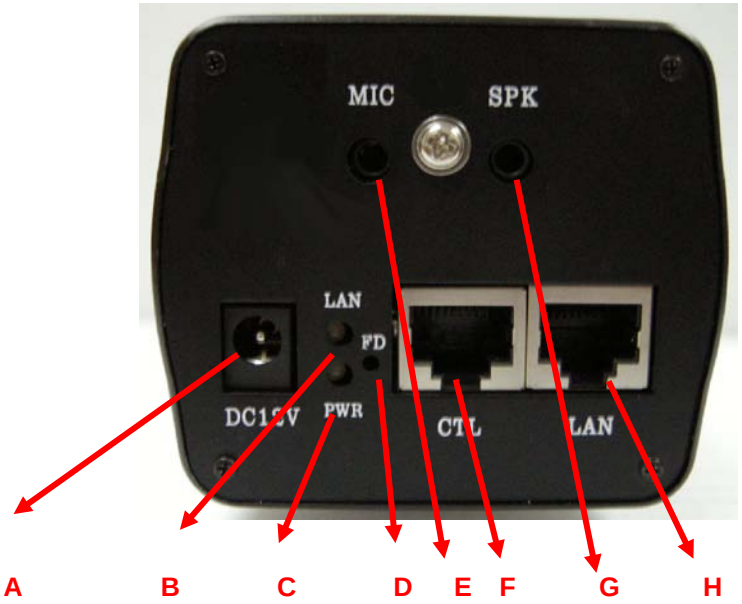

	Name	Description
A	Power Conn.	12V DC Power Input port
B	LAN(Tx/Rx) LED (RED/GREEN)	RED LED – LAN TX/RX(Light blinks when there is data transmission at the connected LAN. GREEN LED – LAN LINK(Light blinks when LAN is physically connected.)
C	POWER LED (RED/GREEN)	RED LED - Light blinks when power is provided.) GREEN LED – Light blinks when IP setup is done.
D	Factory Default	This button can reset the factory default settings at the system. Especially when a user lost his/her admin-password, or when it got any uncertain faulty operation. - After reboot the system, wait until hearing two times of beep sound. - Keep pressing FD button for 5~10 seconds until hearing three times short beep sound. ACT LED blinks during the process. The system will reboot automatically when it's completed.
E	MIC Conn.	1ch Audio Input Port
F	CTL Conn.	CTL Port (RS-485, RS-232, DI, DO)
G	SPEAKER Conn.	1ch Audio Output Port
H	LAN	LAN Connector

Table 4 : MDC-i4260C Rear panel Description

2.2.1. CTL Port Description

The following is Pin-out information of CTL Port to connect PTZ or Sensor (DI/DO). Pin number starts from the left.

For RS-232 connection for Serial input device, Modem or Console (Hyperterminal.connection), RXD,TXD and GND are used. For connection to PC, RXD and TXD are used. RXD and TXD should be cross to communicate properly

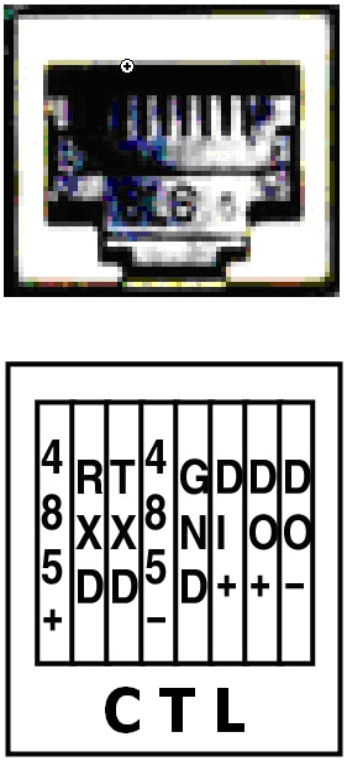

Picture 4 : CTL Port Description

3. MDC-i4260C HW installation and basic setup

3.1. Before installation

- Read carefully User's Manual
- Check User's Network (IP Address, Network Mask and default gateway)
- Secure IP address for MDC-i4260C

3.2. Factory Default Condition

The following table shows the factory default condition. Please refer to this when you need to change the values on admin menu.

	Factory Default Condition
Admin ID	root
Admin password	root
IP address	10.20.30.40
Network mask	255.255.255.0
Gateway	10.20.30.1
Wireless LAN (Option)	Disabled

Table 5 : Factory Default Condition

☞ *Factory default Admin ID and Password are all lower case letters. You can change the password with Capital letters.*

3.3. MDC-i4260C Hardware Installation

Following steps are the physical installation process for MDC-i4260C.

1. Connect cable to LAN port of MDC-i4260C.
2. Connect power cable and turn on power of MDC-i4260C (Await until booting is finished)

After that, you need to follow the steps below.

- First, Network Configuration by MD-installer.
- Second, Camera Configuration by MD-installer or admin-menu.
- Third, Service Configuration by MD-installer or admin-menu.

You can configure most settings on Admin menu by Web Browser so you have to configure Network first.